




Maxi ATV Remote Control User Guide



Remote control layout


- 1 TV input source select
- 2 TV/AUX power/standby
- 3 Color navigation
- 4 Skip Reverse
- 5 Set-top box (STB) PVR transport
- 6 Home
- 7 Navigation and OK
- 8 Back
- 9 Volume up and down
- 10 Channel select and text entry
- 11 Teletext
- 12 Option
- 13 Infra-red (IR) window
- 14 Microphone
- 15 STB power/standby
- 16 Replay
- 17 Skip Forward
- 18 Electronic Program Guide
- 19 Info
- 20 Voice control
This button may have  or  icon
- 21 Channel/Page up and down
- 22 Mute
- 23 Subtitles/closed captions
- 24 Radio
- 25 Low battery warning LED

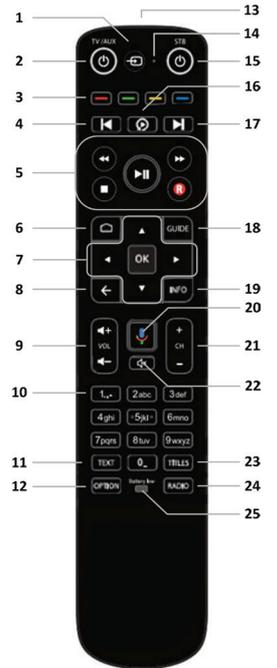

Note: Some functionality (e.g. PVR) may not be available on specific models of set-top box (STB), also functionality may vary with the TV service delivered by your service provider.

1. Inserting batteries

1. Slide the battery housing cover downwards to remove it.
2. Insert two AAA batteries with the + and - ends positioned as shown.
3. Refit the battery housing cover.

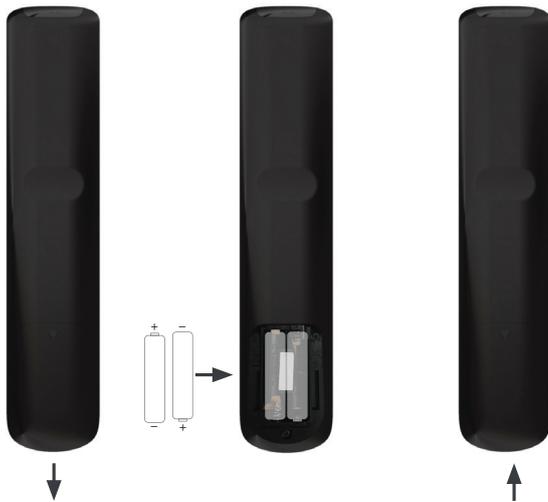

Battery information

- Do not mix different types of battery or old and new batteries.
- Do not use rechargeable batteries.
- Remove the batteries from the remote control if you are not going to use it for several weeks, to avoid the risk of leakage.
- Please respect your environment and any local regulations and dispose of old batteries in a responsible manner.
- Do not attempt to recharge the batteries.
- Immediately remove any leaking batteries.
- Take care when handling leaking batteries as they may cause burns to the skin or eyes, or other physical injuries.

Operation

- When you press a key, point the remote control towards the front of the STB to ensure correct operation.
- Do not cover the infra-red (IR) window at the front of the remote control and at the front of the STB.
- When a key is pressed, either the STB key will flash or, if a TV brand has been entered, the TV/AUX POWER key will flash, depending on which product is being controlled by the remote control.
- If you press a key for more than 30 seconds the remote control will stop transmitting commands to preserve battery life.

Programming the Matterhorn Remote

1. Controlling the Set-Top Box (STB)

Your remote control has to be 'paired' to the STB to control it. A remote control can only pair with one STB at a time.

Note: please ensure the Set-top box is powered on first

1. Press and hold OPTION and OK for at least three seconds until the STB key flashes to acknowledge. The timeout for pairing is 60 seconds.

If pairing is successful: STB-LED will provide a confirmation blink.

If pairing is unsuccessful: the TV/AUX POWER key gives a long flash to indicate an error (the STB may indicate this change, depending on the software running on the Set-top Box).

During pairing no remote control keys will work except the BACK key.

2. Controlling the TV – Auto Search

Note: this process may take several minutes to find your TV code.

Make sure your TV is turned on. The STB does not need to be turned on for the brand search.

1. Press 1 and 3 together for at least three seconds until the TV/AUX POWER key flashes twice and remains on.
 - **If successful:** the STB key will flash once and remain on.
 - **If unsuccessful:** the TV/AUX POWER key will give a long flash and the remote control will revert to normal operation.
2. Press and continue to hold the TV button.
 - The remote will now start searching for codes to control your TV. A new code is tried every 1.5 seconds.
3. Once the TV turns off, release the TV button. Releasing the button confirms the code.
 - Try the Volume+/-, MUTE, TV-INPUT buttons to ensure they are working.
4. If working press the BACK key.
5. If not working, press and hold the TV button again to continue the search. When the TV power state changes, release the button and try steps 4&5 again.

If Search Is unsuccessful, you can also try "Manually input TV Manufacturer's Code" in the "Troubleshooting and Advanced Features" section.

Troubleshooting and Advanced Features

Control The TV – Manually Input TV Manufacturer's Code

The TV/AUX POWER, TV INPUT, VOL+, VOL- and MUTE keys of the remote control can be programmed to operate your TV. To do this, your remote control must first learn the 'brand code' of your TV. By default, the remote control is programmed with the most common brand code 0618 (Samsung).

1. Press <<2 + 6>> simultaneously for 3 seconds. During the initial 3 seconds, the LEDs will remain off, then the TV-LED will provide a confirmation blink and remain on.
2. Enter a 4 digit code set ID code from TV Brand Codes for Maxi (Find the 4-digit brand code for your TV BRAND CODES at <https://www.amino.tv/resources/>)
 - When a digit is pressed, the TV-LED gives a short inverse blink. Any other key (Non-digit key) press will result in an invalid sequence. In this case, the RCU will give an error blink (Blink rapidly 4 times) and return to user mode.
 - If entered sequence of digits is valid, TV-LED will execute a confirmation blink, and then goes back to user mode.
 - If entered sequence of digits is invalid, TV-LED will execute an error blink, and then goes back to user mode.

If you change your TV to a different brand the remote control will require re-programming. Repeat this brand search procedure with the brand code for your new TV.

5. IR Learning mode

The Maxi ATV remote control can learn a key function from another 'source' remote control. This may be useful when the Auto-Search or Manual programming steps fail.

1. Choose your 'target key' on the remote control. It must be one of the following keys: TV/AUX POWER / TV INPUT / VOL+ / VOL- / MUTE. This key will learn a function from the source remote control.
2. Press 4 and 6 for at least three seconds. The TV/AUX POWER key will flash twice and remain on.
3. Press your target key within 30 seconds:
 - if valid, the TV/AUX POWER key will give a confirmation flash and remain on.
 - if invalid, or you do not press within 30 seconds, the TV/AUX POWER key will give an error blink and return to user mode.
4. Hold the Maxi ATV remote control 3 - 6 cm from the source remote control with the IR windows facing each other, then press your target key on the source remote control (e.g. if your target key on the Maxi ATV remote control is mute, press mute on the source remote control).
5. If the IR signal is received correctly, the TV/AUX POWER key will turn off and the remote control will return to normal mode (note: this can overwrite a previously learned code).
6. If the IR signal is not received correctly, or is received after 30 seconds, the Maxi ATV remote control will not store the code from the source remote control: it will give an error blink and return to user mode.
7. If the Back key is pressed on the remote control while it is waiting for an IR signal, the TV/AUX POWER key will give an error blink return to user mode. (If the target key is pressed, any learned code on it is cleared.)
8. To clear the target key, press 4 and 6 for at least three seconds. The TV/AUX POWER key will flash twice and remain on. Then press your <target key> twice. The TV/AUX POWER key will flash to confirm the target key is cleared.

6. Factory reset

Factory reset will return the remote control to it's factory settings.

1. Press 1 and 6 for at least three seconds until the TV/AUX POWER key flashes twice then stays on.
2. Enter the key sequence 9 8 1. After completing the sequence the STB key will flash twice. The TV settings are now deleted from the remote control and it returns to factory settings: IR mode, Samsung brand code (0618) and unpaired.